


# SIZE CHART

## FRONT LEG - REAR LEG

**ABSOLUTE**  
**DRESSAGE**

**ELASTIC**

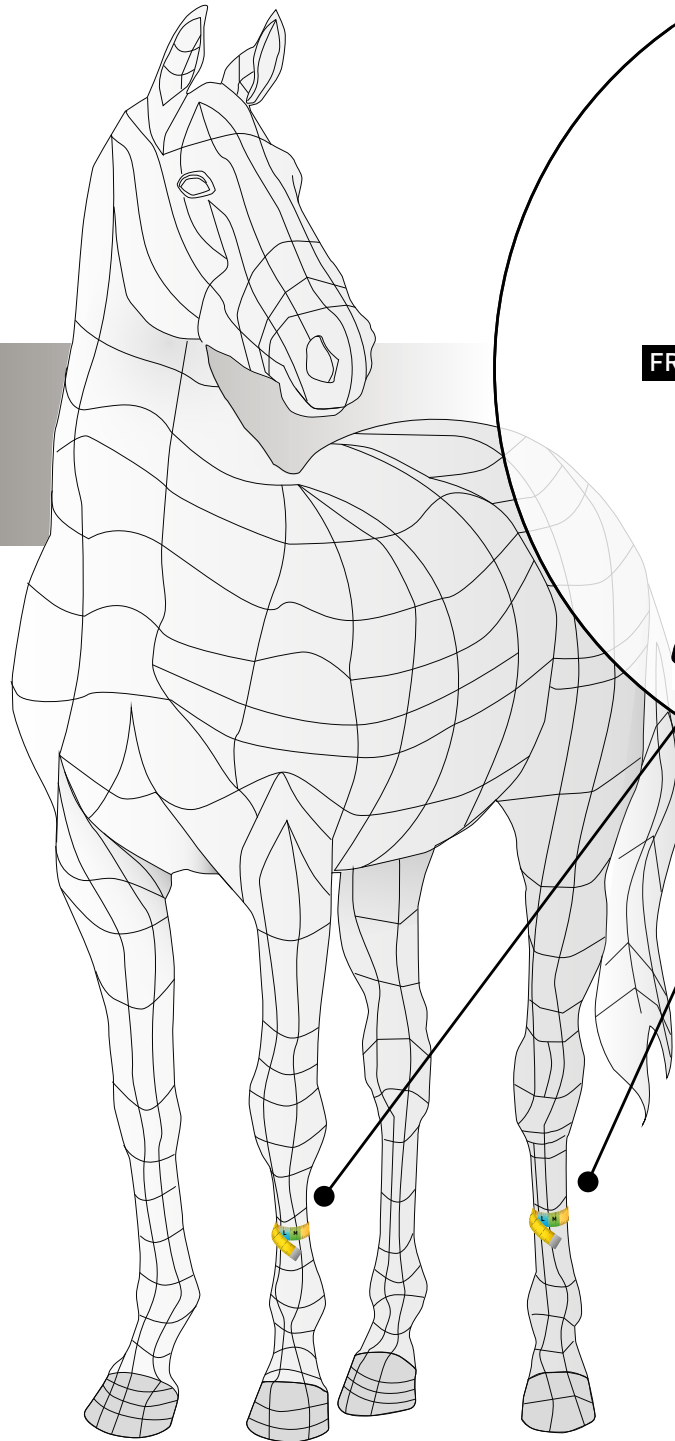

**FRONT**

**REAR**

### Cannon bone circumference

Product size	FRONT LEG	REAR LEG
<b>M</b>	19.5-22 cm 7.7-8.7 inch	22-24 cm 8.7-9.5 inch
<b>L</b>	22.5-24 cm 8.9-9.5 inch	24.5-26 cm 9.7-10.3 inch



# ABSOLUTE DRESSAGE (AD)

## OVERLAPPING GUIDE

ELASTIC



**AD size too small**



**AD size correct overlapping**



**AD size too big. Excessive overlapping**



# ABSOLUTE DRESSAGE

## FITTING GUIDE

ELASTIC



NOT CORRECT




CORRECT

## NINE SIMPLE STEPS TO POSITION ABSOLUTE

ELASTIC

### PHASE 1: PLACE THE PROTECTION

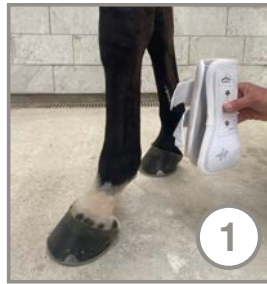

Grab the boot with the right hand, if you are on the left side of the horse, or with the left if you are on the right.



Keep it halfway between the two hooks and place it on the cannon bone.



Raise it until the fetlock itself blocks it.

### PHASE 2: HOOK THE STRAPS



First, take the lower elastic strap and pull it forward and towards you.



Hook it up, taking care that the lining overlaps correctly.




Repeat the same thing with the upper strap.

### PHASE 3: CHECK THE DETAILS



Check that the upper edges are well aligned.

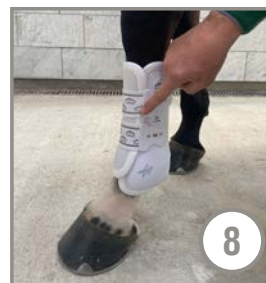

Check that the lining is properly overlapped.



Check that the protection adheres to the fetlock.

